

Baofeng Radio Programming Instructions

- 1) Remove your radio's antenna and set it aside.
- 2) Ensure your radio is in **Frequency Mode** and you are on the **Upper Line** of the display.
- 3) Enter your Receiving Frequency.
- 4) Press: **MENU, 25, MENU** and press the **Up** or **Down** arrow until the desired Offset Direction is displayed. Press **MENU** to confirm and then **EXIT**.

5) Press: **MENU, 26, MENU** and enter your Offset. Press **MENU** to confirm and then **EXIT**.

6) Press: **MENU, 11, MENU** and enter your Receiving CTCSS code. Press **MENU** to confirm and then **EXIT**. (You may have to push the **Up** or **Down** arrow to change CTCSS from OFF).

7) Press: **MENU, 13, MENU** and enter your Transmitting CTCSS code. Press **MENU** to confirm and then **EXIT**.

Saving your channel:

8) Press **MENU, 27, MENU**: enter your channel number or use the **Up** or **Down** arrow until you find the channel number you want to use. Press **MENU** again. The radio will say *Receiving Frequency*. Press **EXIT**. (An available channel will be one that does *NOT* indicate CH next to the number).

9) Press the * button. Your radio should now display your Offset or Transmitting Frequency.

10) Press: **MENU, 27, MENU**: enter the channel number you just used (if it's not already showing). Press **MENU** again. The radio will say *Transmitting Frequency*. Press **EXIT**.

Congratulations, you're done!

For Simplex, follow the directions above, but set MENU's 11, 13 and 25 to OFF and MENU 26 to 000,000.

Omit step 9.